



SYDNEY; 11/5 HUDSON AVENUE CASTLE HILL NSW 2154 **MELBOURNE;** 4/5 KELLETS RD, ROWVILLE VIC 3178
PH; 02 8850 2700 Fax 02 8850 2701 PH; 0431 366 318 OR 0435 907 779
WEB; www.all-trades.com.au EMAIL ; sales@all-trades.com.au

User Tips; PIT KEY and SEAL BREAKER

Order Code; VAN-PKEY (pit key), VAN-SB (seal breaker)

- We recommend that you use the PIT KEY in conjunction with a SEAL BREAKER to minimise the risk of back strain and or bending your key out of shape.
- Remember that the PIT KEY is designed to lift the pit lid, it is not a crowbar or dragging tool.
- Keep the pit key engaged as close to 90 degrees in relation to the pit lid as possible in order to eliminate the chance of bending.
- **Recommended for use on P1 through to P5 pit lids only. (P5 Pit Lids weigh approx 25kg)**



Once you have the pit key and seal breaker fitted snugly into the pit lid push the flat square plate down with your foot to pop the lid.

Keep the key in as close to an upright position as possible to reduce the risk of bending the head or shaft of the key. A good rule of thumb is to keep the key and the lid at 90 degrees to each other.

NOTE: PIT KEYS and SEAL BREAKERS are covered for a 12 month warranty for manufacturing defects only.